ABBREVIATED GUIDELINES

IMPRESSA
S70, X70

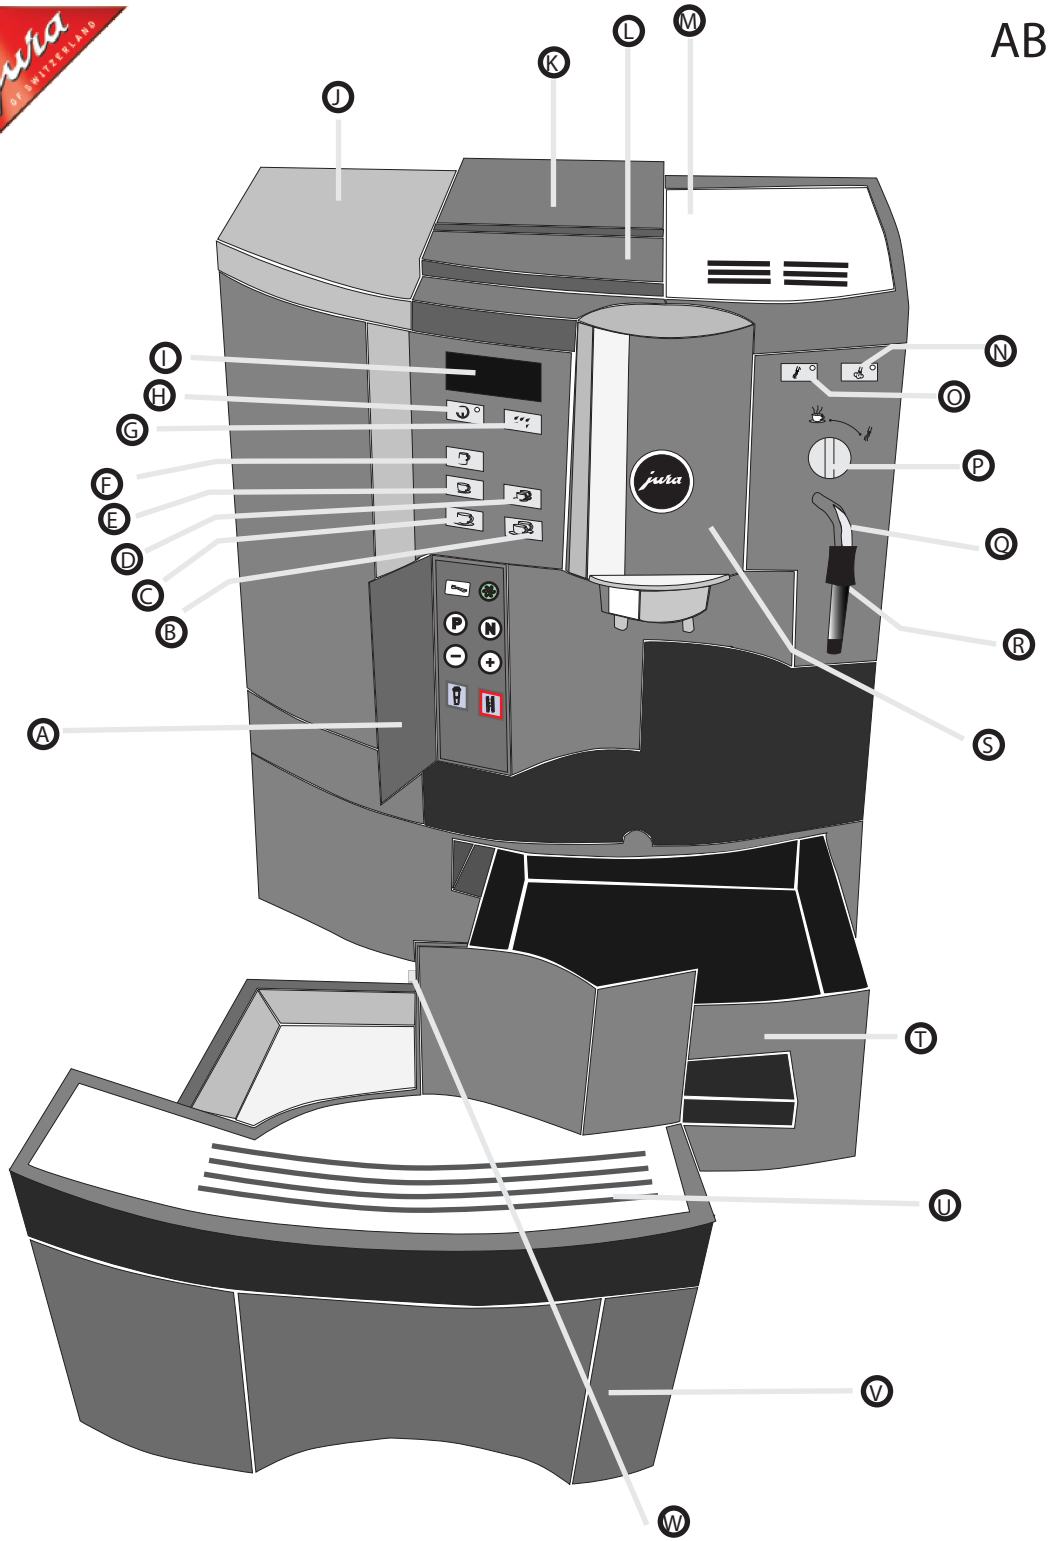

A	Programming panel behind door
B	Coffee key for 2 normal cups
C	Coffee key for 1 normal cup
D	Coffee key for 2 small cups
E	Coffee key for 1 small cup
F	Key for special coffee
G	Rinsing key
H	ON/OFF switch
I	Display dialogue system (screen)
J	Water tank
K	Cover for bean container
L	Cover for pre-ground coffee filler funnel
M	Cup warming tray
N	Selector key for steam
O	Selector key for hot water
P	Selector switch for coffee or hot water/steam
Q	Pivoting nozzle
R	Frothing nozzle
S	Height-adjustable coffee spout
T	Container for coffee grounds
U	Drip tray cover (grid)
V	Drip tray
W	Contacts

ABBREVIATED GUIDELINES - CLEANING

IMPRESSA
S70, X70

You know your machine needs cleaning when below signals appear.

CLEAN UNIT

COFFEE READY

You can still draw off coffee or steam/hot water and start the cleaning programme later.

CLEAN NOW

An acoustic signal indicates the need of an immediate cleaning.

The programme lasts approx. 15 minutes.

Do not interrupt programme once started.

1 Switch on machine (H).

(H)

2 Open door (A) and press this key until you hear an acoustic signal to start the cleaning programme.

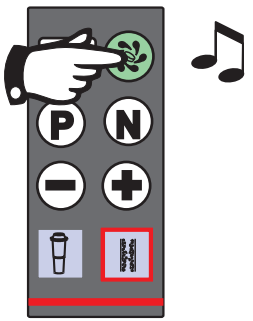

3 EMPTY TRAY

Empty the tray (V) . Put it back after 10 sec.

4 Fill the water tank (J) with tap water and reinstall it in the machine.

5 ADD TABLET

PRESS CLEAN

Put a JURA cleaning tablet in the filler funnel for powder coffee (L).

Use JURA cleaning tablets only, which are available at your local authorized dealer.

6 Press this key again.

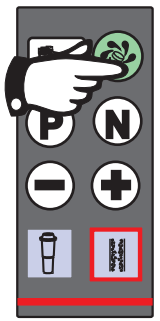

7 UNIT CLEANING

Lasts approx. 13 min.

8 EMPTY TRAY

Empty the tray (V) . Put it back after 10 sec.

9 PLEASE WAIT

Lasts approx. 2 min.

10 RINSE UNIT

(G)

11 COFFEE READY

The cleaning programme is now complete.

You can clean the filler funnel for pregroundcoffee (L) using a flat brush.

ABBREVIATED GUIDELINES - DE-SCALING WATER SECTOR

(De-scaling only required if you do not use JURA Claris filter)

IMPRESSA
S70, X70

You know your machine needs de-scaling when below signals appear.

UNIT CAL. FIED

WATER SECTOR

You can still draw off coffee or steam/hotwater and start the de-scaling programmelater.

This message only appears, if the unit is read to draw off water or steam. is ready

The programme lasts approx. 45 minutes.

Do not interrupt programmeoncestarted.

1

Switch off machine (H).

Allow the machineto cool down for 5 hours.

2

Only after machine has cooled down, remove the water tank (J) from the machine and empty it.

3

Open door (A) and press this key until you hear an accoustic signal.

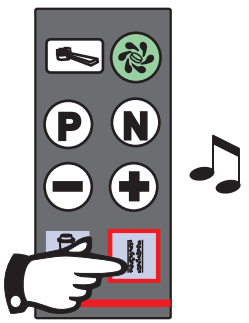

4

EMPTY TRAY

Empty the tray (V) . Put it back in after 10 sec.

5

AGENT IN TANK

Completely dissolve the contents of one blister (2 tablets) in 0,6 litres of water in a vessel and pour the mixture into the water tank (J). Reinstall the tank. Make sure it engages properly.

Use JURA de-scaling tablets only, which are available at your local authorized dealer.

6

AGENT IN TANK

CHOOSE SECTOR

PRESS CALC

6

Place any jug under the Pivoting nozzle (Q).

7

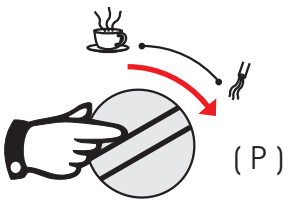

8

Lasts approx. 40 min.

WATER SECTOR

UNIT IS DECALC.

9

FILL WATER

Fill the water tank (J) with tap water and reinstall it in the machine.

10

PRESS CALC

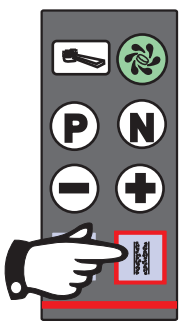

Lasts approx. 3 min.

WATER SECTOR

UNIT IS DECALC.

11

CLOSE TAP

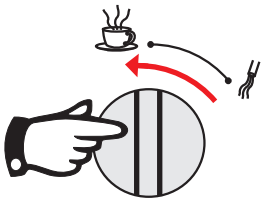

12

RINSE UNIT

13

UNIT RINSING

COFFEE READY

The de-scaling programme for the water sector is now complete.

ABBREVIATED GUIDELINES - DE-SCALING COFFEE SECTOR

(De-scaling only required if you do not use JURA Claris filter)

IMPRESSA
S70, X70

You know your machine needs de-scaling when below signals appear.

UNIT CAL. FIED

COFFEE SECTOR

You can still draw off coffee or steam/hotwater and start the de-scaling programme later.

The programme lasts approx. 40 minutes.

Do not interrupt programme once started.

1

Switch off machine (H).

(H)

Allow the machine to cool down for 5 hours.

2

Only after machine has cooled down, remove the water tank (J) from the machine and empty it.

3

Open door (A) and press this key until you hear an accoustic signal.

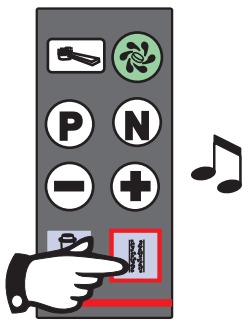

4

EMPTY TRAY

Empty the tray (V) . Put it back in after 10 sec.

5

AGENT IN TANK

Completely dissolve the contents of one blister (2 tablets) in 0,6 litres of water in a vessel and pour the mixture into the water tank (J). Reinstall the tank. Make sure it engages properly.

Use JURA de-scaling tablets only, which are available at your local authorized dealer.

6

AGENT IN TANK

CHOOSE SECTOR

PRESS CALC

7

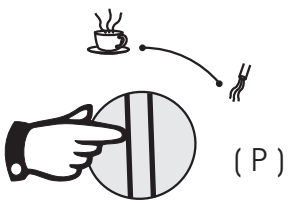

(P)

8

COFFEE SECTOR

UNIT IS DECALC.

Lasts approx. 35 min.

9

EMPTY TRAY

Empty the tray (V) . Put it back in after 10 sec.

10

FILL WATER

Fill the water tank (J) with tap water and reinstall it in the machine.

11

PRESS CALC

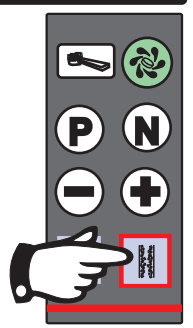

COFFEE SECTOR

UNIT IS DECALC.

Lasts approx. 3 min.

12

EMPTY TRAY

CLEAN CONTACT

Slide tray (V) out, empty it, clean the contacts (W) at the back.
Replace tray.

13

RINSE UNIT

(G)

14

UNIT RINSING

COFFEE READY

The de-scaling programme for the coffee sector is now complete.

ABBREVIATED GUIDELINES - REPLACE CLARIS FILTER

IMPRESSA
S70, X70

You know your Claris filter needs replacing when the below signals appear.

REPLACE FILTER

COFFEE READY

The filter cartridge loses its effect after drawing off 50 litres.

If you draw off less than 50 litres the cartridge should be replaced after two months. There will be no special message displayed, but you will find a special disc for setting the date on which the filter cartridge should be replaced.

1 Remove the water tank (J) from the machine and pour out the water.

2 Push the unlocking lever inwards and fold up the cartridge holder.
Pull out the old filter cartridge.
Install the new cartridge carefully.
Properly adjust the cartridge, otherwise the cartridge holder will not engage.

3 Refill the water tank (J) with tap water and reinstall it in the machine.

4 Switch on machine (H).

5 Open door (A) and press this key until you hear an acoustic signal.

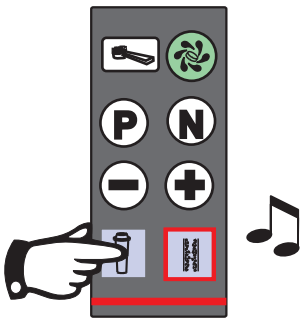

6 RINSE FILTER

OPEN TAP

7 Place any jug (min. 0,5 l) under the pivoting nozzle (Q).

8

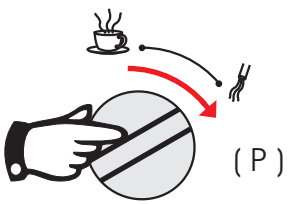

The colour of the water may have changed slightly. This in no way affects the taste.

9 CLOSE TAP

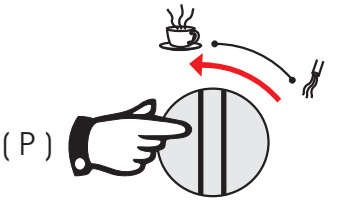

The system gives off steam.

10 COFFEE READY

Note: If display shows "UNIT CALCED" in spite of using a Claris filter, change programming from "FILTER NO" to "FILTER YES". (See Programming Filter in your Instructions for Use).